



## **DISARMING DOOR ALARM**

We highly recommend that you disconnect Chamber from power supply. This will avoid possible electrical shock.

1. Remove the top of the chamber.
2. Locate the Control Board (Located inside Chamber behind LCD Screen.)
3. Locate the Main Terminal Block on the Control Board (TB1).
4. Locate connector pin #19 (red wire), disconnect the red wire and tape the end.
5. Strip both ends of a short piece of wire, and make a “jumper” between pins #19 and #20 on the Main Terminal Block.
6. Replace Chamber Top and plug the Chamber back into its power supply.

***Innovative Design, Engineering and Manufacturing since 1946***

4420 San Fernando Road Glendale CA 91204 818 247 7500 fax 818 247 7257 melco@melcowire.com www.melcowire.com