




Replacement of Door Sensor

Follow instructions for “**Door Sensor Access**”. Once you have removed the bracket holding the Door Sensor(s) in place, do the following:

1. Remove the heat-shrink tubing from wires and de-solder the connections.
2. Solder the new sensor in place and heat-shrink or electrical tape the connections to protect from short circuits. See Wiring Diagram below.
3. Re-install sensor onto mounting bracket and re-install bracket into chamber.

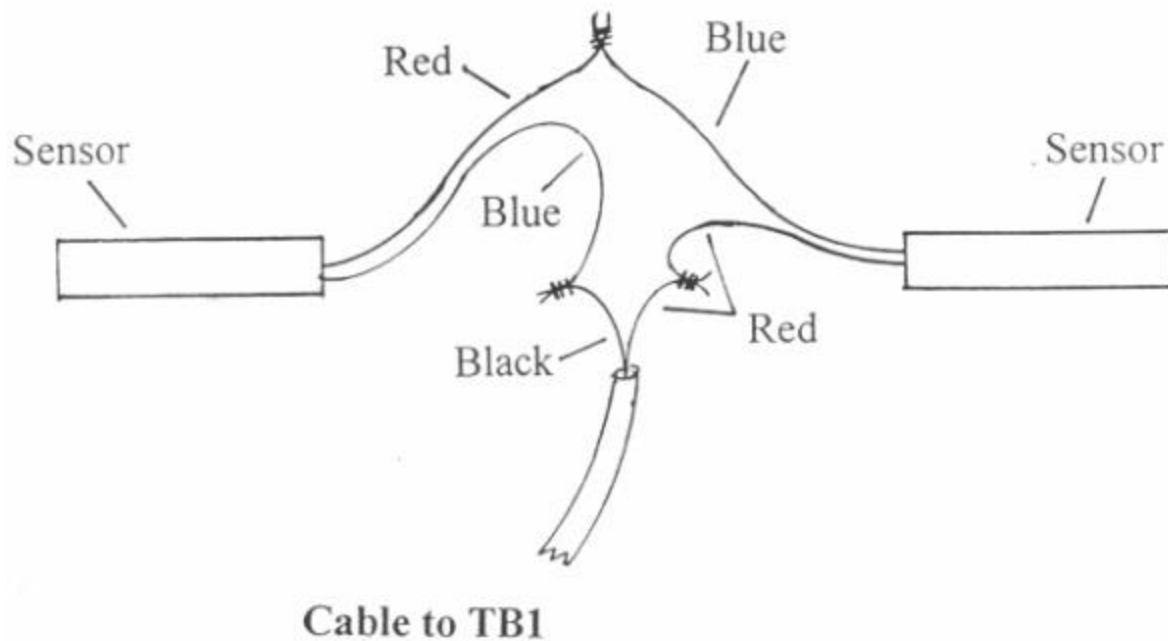

Innovative Design, Engineering and Manufacturing since 1946

4420 San Fernando Road Glendale CA 91204 818 247 7500 fax 818 247 7257 melco@melcowire.com www.melcowire.com