




## **Calibrating LCD Screen** (Internal Temperature Adjustment)

Having determined that the LCD Screen is displaying an incorrect temperature the display can be calibrating to your known standard by simple adjustment.

1. Remove CEC Top Panel.
2. Locate R12 (Temperature adjusting Pot) on the Main P/C Board. (See drawing below.)
3. Turn the R12 adjusting pot clockwise to increase the display value.
4. Turn the R12 adjusting pot counterclockwise to decrease display value.

Adjust R12 Adjusting Pot to match the interior temperature measured by a calibrated thermometer.

See attached drawing for location of R12 Adjusting Pot.

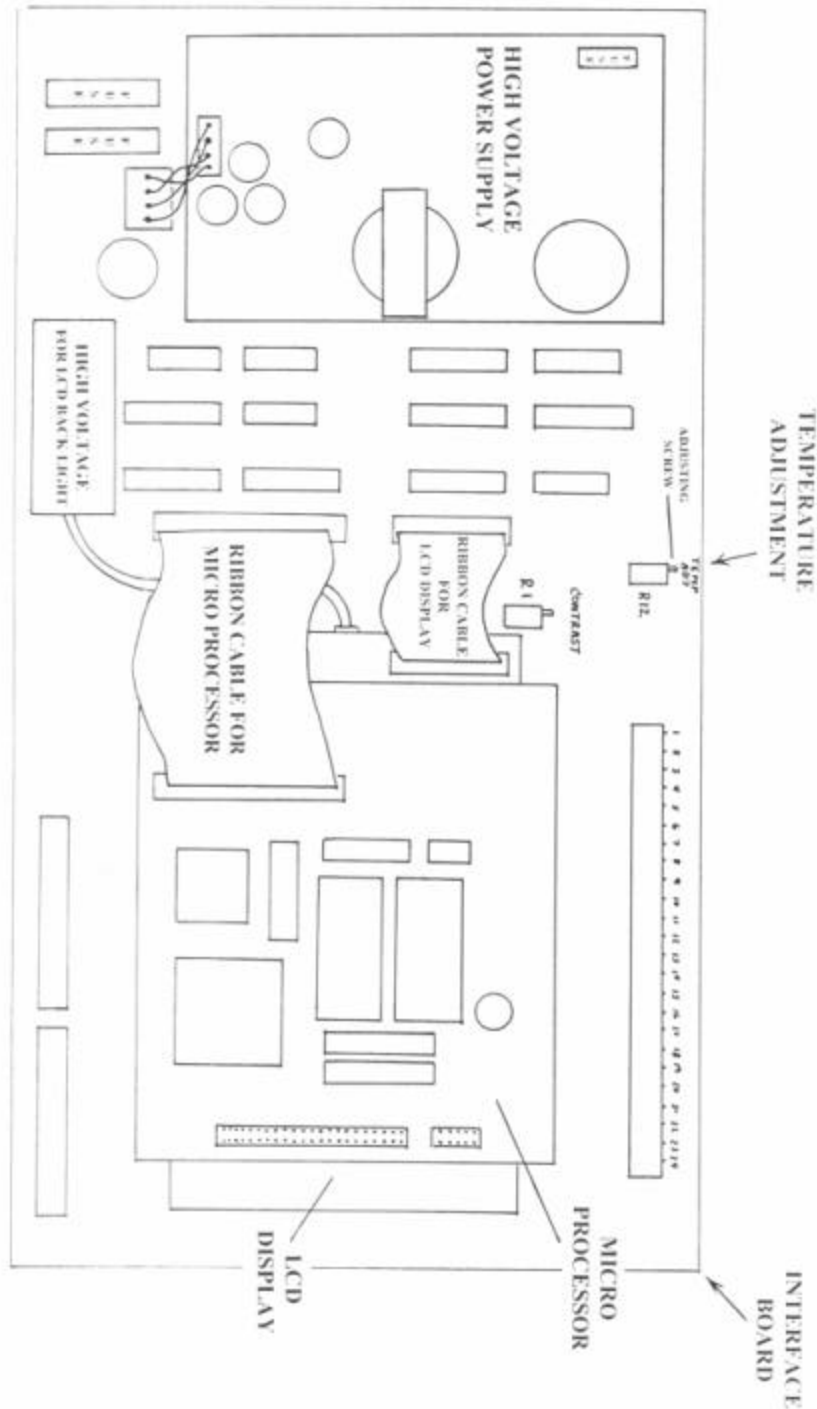

**Innovative Design, Engineering and Manufacturing since 1946**

4420 San Fernando Road Glendale CA 91204 818 247 7500 fax 818 247 7257 melco@melcowire.com www.melcowire.com